

## G-70 Version 3 Updating Instructions

### LOADING THE G-70 UPDATING DATA PRESERVING YOUR USER DATA (WINDOWS)

For Operating System(s): WindowsXP / WindowsME / Windows2000 / Windows98SE

The complete Update operation takes about 7 minutes. Though your user data are preserved during the update, we recommend that you make a backup to avoid damaging your data in case something goes wrong. Before starting the update procedure, make sure that the "Internal Protection" switch (on the G-70 rear panel) is set to "OFF" position (unlocked position). This updating procedure requires at least 11000Kbyte of free space in your G-70 Internal Memory. To check the remaining memory space, press [MENU] > [UTILITY] > [INFO], and see "Free Space Internal Memory." If you do not have enough memory space, please see "G-70 Update / Backup / Recovery" page in [www.rolandkeyboardclub.com](http://www.rolandkeyboardclub.com) website or contact your nearest Roland Service.

### Loading Update Data into the G-70

1. Connect the G-70's USB port to your computer.
2. If a memory card is connected to the G-70's PCMCIA slot, or if a floppy disk is inserted in the drive, remove it before proceeding.
3. Press [MENU] > [USB DATA STORAGE] > [INTERNAL MEMORY]. As soon as the connection has been established, the G-70's display shows "CONNECTED" (USB DATA STORAGE page).
4. On your computer, open the "My Computer" window. Locate the "Removable Disk" entry. It refers to the G-70's internal memory.
5. Download from [www.rolandkeyboardclub.com](http://www.rolandkeyboardclub.com) the file "Ver\_03\_00.zip" and unzip it in your computer.
6. Drag & drop all the contents of the "Ver\_03\_00" folder into the "Removable Disk" icon (i.e. the G-70's Internal Memory) whose window you opened above. If a warning appears that the target area already contains folders of the specified names, tell Windows to replace everything.
7. When all files have been copied, terminate the USB connection using the tray icon at the right of your computer's tool bar. The tray icon related to the USB connection looks like a green arrow on top of an electronic device. Leave the mouse pointer on this icon and wait for the "Safely remove hardware" message to appear.
8. Using the left mouse button, double-click this icon to open a window that lists all hardware devices that are currently connected to that USB port. Select "USB mass storage device" and check at the bottom whether the description refers to your G-70 ("G-70 mass storage device").
9. Click "Disconnect," and in the next window "OK." Wait until a message informs you that you can disconnect the hardware.
10. Click "OK" to close this window. On the G-70, press the [EXIT] button or [DISCONNECT] field. Disconnect the G-70's USB port from your computer and switch off the G-70.

## Updating to OS3

11. Hold down the [DISK&MEDIA] button to the lower left of the display while switching on the G-70.

Keep holding that button until the "SYSTEM UPDATE" message appears.

12. Press the [1] button in the G-70's USER PROGRAM section. The G-70 starts loading the OS3 software. When all data have been loaded, the "Power Off and Power On again" message appears.

Switch off the G-70, wait a moment, then switch it on again.

## Updating New Styles

13. Press the G-70's FINDER [STYLE] button. A progress bar shows the status of the operation.

## Loading the New Factory User Programs

14. Press [MENU] > [UTILITY] > [FACTORY RESET], then the [EXECUTE] field in the display.

Press the [EXIT] button to return to the main page.

## LOADING THE G-70 UPDATING DATA PRESERVING YOUR USER DATA (MACINTOSH)

For Operating System(s): MacOSX / MacOS

The complete Update operation takes about 7 minutes. Though your User data are preserved during the update, we recommend that you make a backup to avoid damaging your data in case something goes wrong. Before starting the update procedure, make sure that the "Internal Protection" switch (on the G-70 rear panel) is set to "OFF" position (unlocked position). This updating procedure requires at least 11000Kbyte of free space in your G-70 Internal Memory. To check the remaining memory space, press [MENU] > [UTILITY] > [INFO], and see "Free Space Internal Memory." If you do not have enough memory space, please see "G-70 Update / Backup / Recovery" page in [www.rolandkeyboardclub.com](http://www.rolandkeyboardclub.com) website or contact your nearest Roland Service.

## Loading Update Data into the G-70

1. Connect the G-70's USB port to your computer.

2. If a memory card is connected to the G-70's PCMCIA slot, or if a floppy disk is inserted in the drive, remove it before proceeding.

3. Press [MENU] > [USB DATA STORAGE] > [INTERNAL MEMORY]. As soon as the connection has been established, the G-70's display shows "CONNECTED" (USB DATA STORAGE page).

4. Download from [www.rolandkeyboardclub.com](http://www.rolandkeyboardclub.com) the file "Ver\_03\_00" and unzip it in your computer.

5. Open the "ROMStyle" folder contained in "Ver\_03\_00" folder, select all files and drag & drop all selected files into the "ROMStyle" folder of "G70\_SSD" to copy them to the G-70.

If a message asking you to overwrite data appears, confirm to replace the corresponding contents of the G-70's internal memory.

6. Open the "Update" folder contained in "Ver\_03\_00" folder, select the file and drag & drop the selected file into the "Update" folder of "G70\_SSD" to copy it to the G-70. If a message asking you to overwrite data appears, confirm to replace the corresponding contents of the G-70's internal memory.

7. Open the "Userprg" folder contained in "Ver\_03\_00" folder, select the file and drag & drop the selected files into the "Userprg" folder of "G70\_SSD" to copy it to the G-70. If a message asking you to overwrite data appears, confirm to replace the corresponding contents of the G-70's internal memory.

8. Open the "Put New Style Here" folder contained in "Ver\_03\_00" folder, select all files and drag & drop all selected files into the "Put New Style Here" folder of "G70\_SSD" to copy them to the G-70. If a message asking you to overwrite data appears, confirm to replace the corresponding contents of the G-70's internal memory.

9. Drag the "G70\_SSD" icon to the Trash (or use the equivalent shortcut). Wait until the icon has disappeared from your desktop.

10. On the G-70, press the [EXIT] button or [DISCONNECT] field.

11. Disconnect the G-70's USB port from your computer and switch off the G-70.

## Updating to OS3

12. Hold down the [DISK&MEDIA] button to the lower left of the display while switching on the G-70. Keep holding that button until the "SYSTEM UPDATE" message appears.

13. Press the [1] button in the G-70's USER PROGRAM section. The G-70 starts loading the OS3 software. When all data have been loaded, the "Power Off and Power On again" message appears. Switch off the G-70, wait a moment, then switch it on again.

## Updating New Styles

14. Press the G-70's FINDER [STYLE] button. A progress bar shows the status of the operation.

## Loading the New Factory User Programs

15. Press [MENU] > [UTILITY] > [FACTORY RESET], then the [EXECUTE] field in the display.

Press the [EXIT] button to return to the main page.